


# Interior Installation

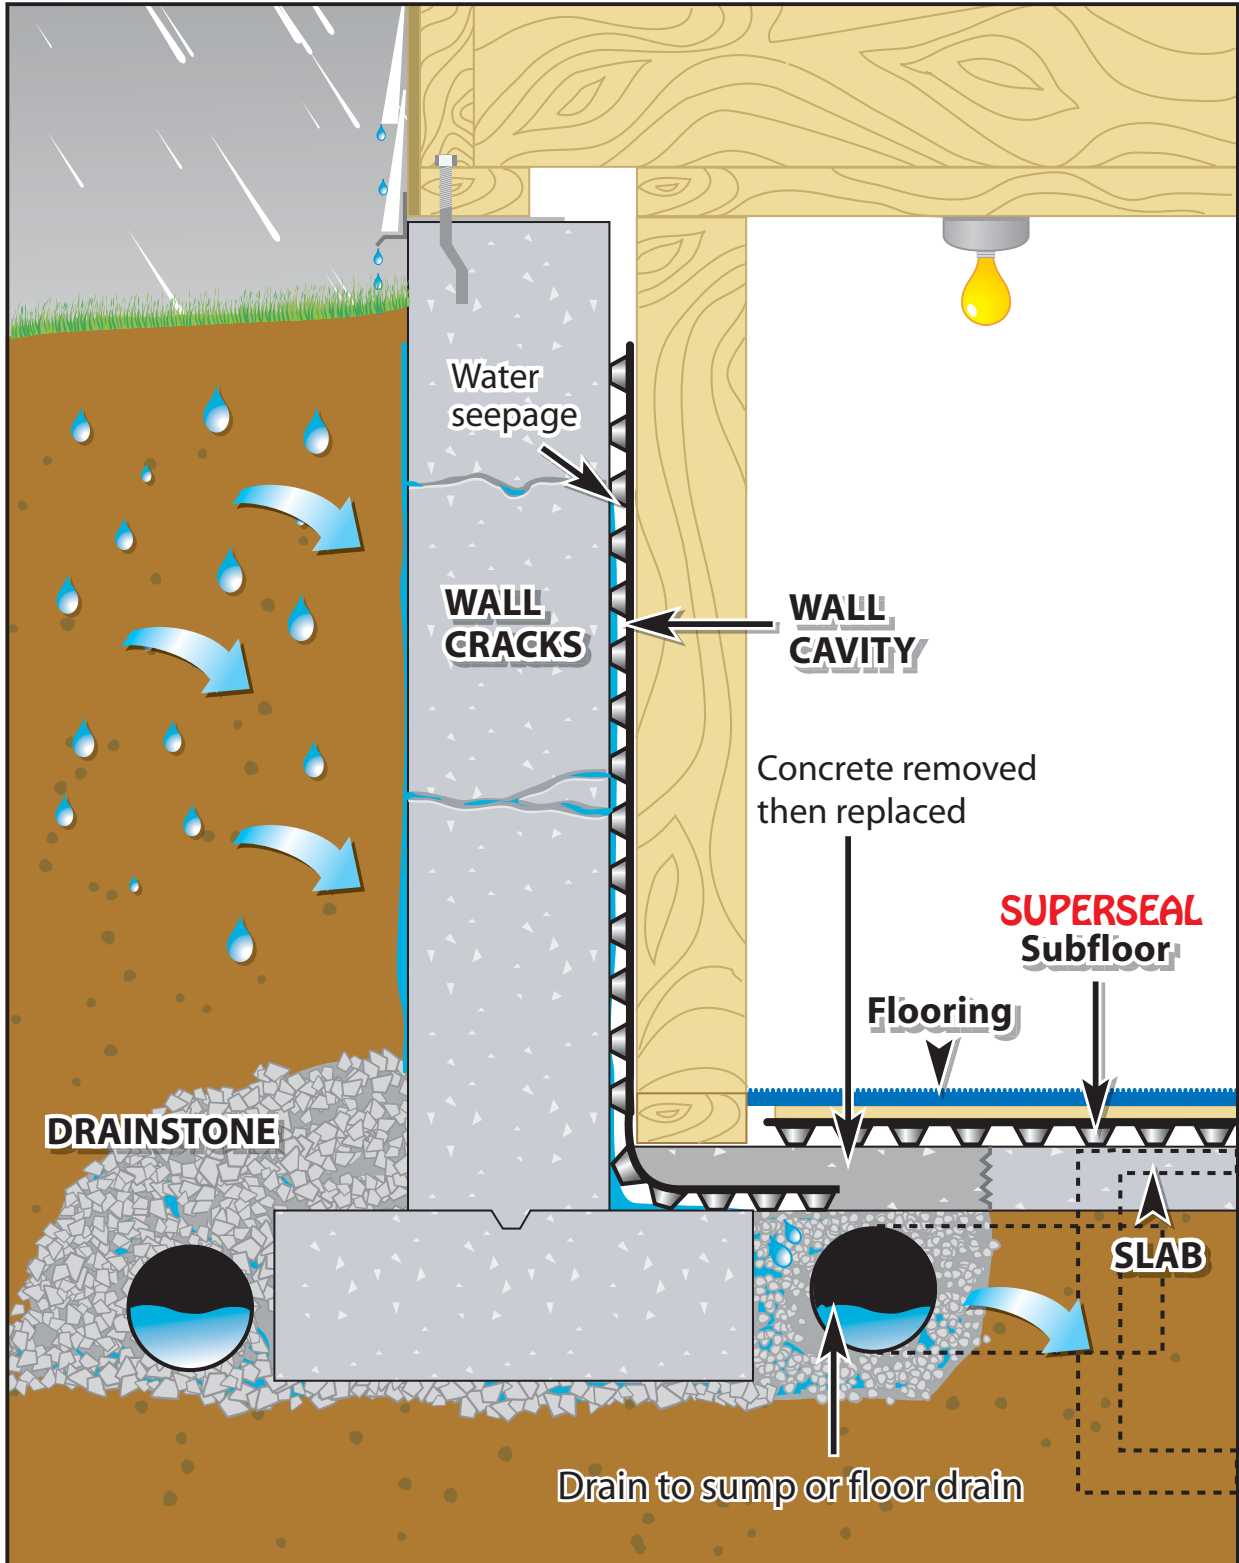

Instead of excavating the outside you can also install **SUPERSEAL** Dimpled membrane on the inside. This type of application redirects incoming moisture and water directly to your drainage system.

*NOTE: \* Just 7% moisture in your insulation could reduce the thermal efficiency in that area by up to 70%*

