


Installing SUPERSEAL Dimpled Membrane on an ICF

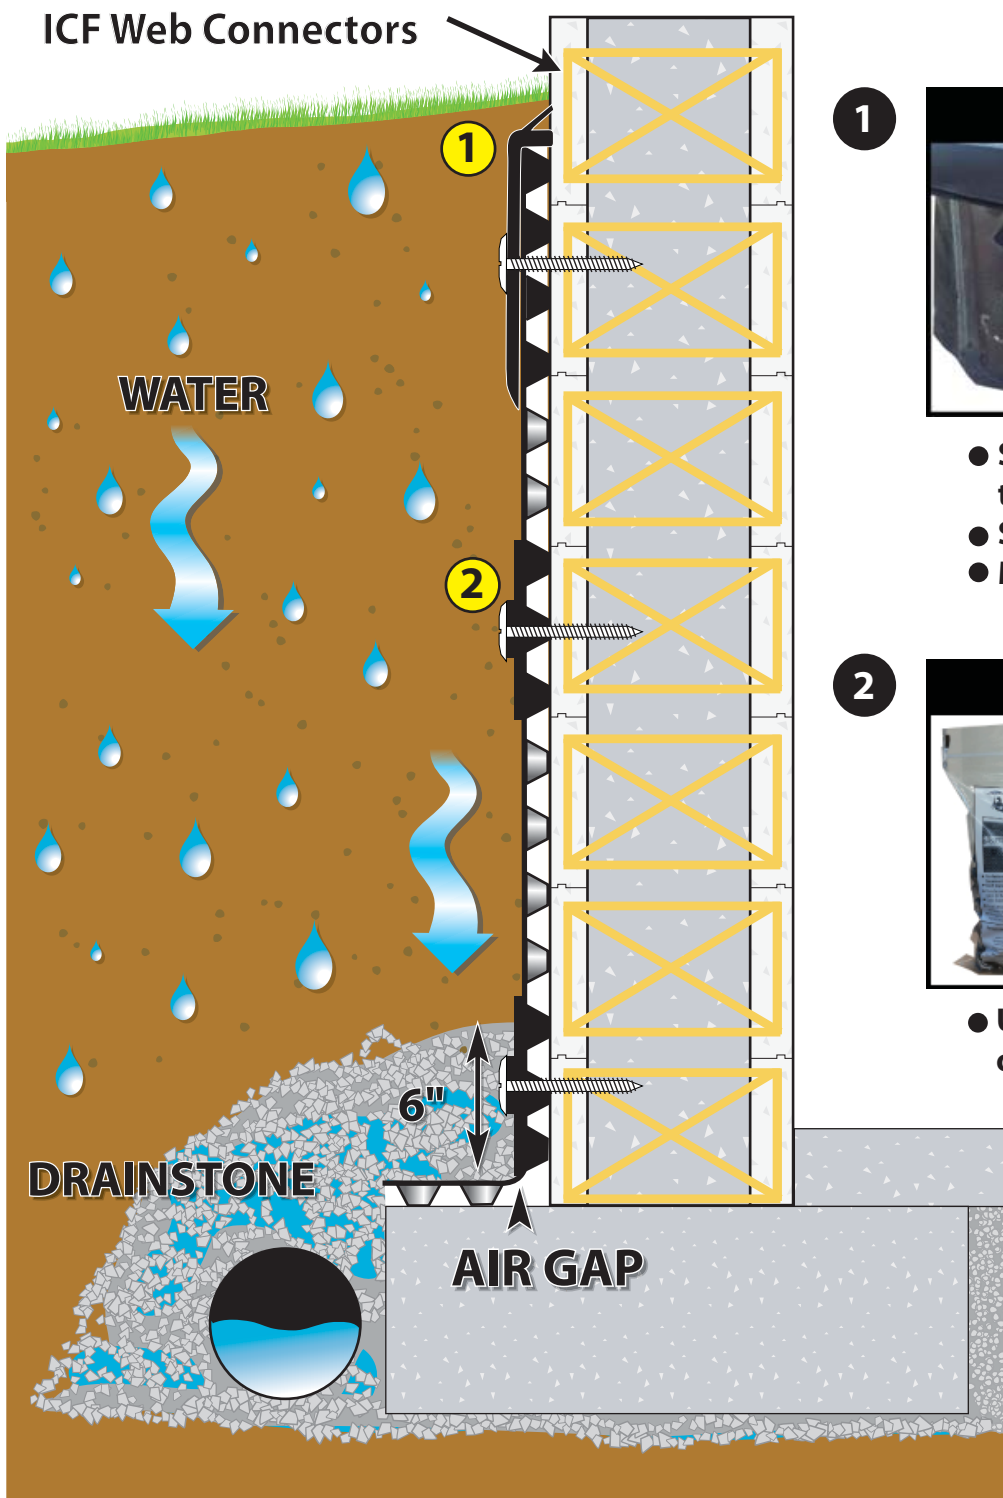

- Seals and locks the membrane to the wall in one step.
- Simple and easy to install.
- Made of tough, long-lasting HDPE



- Used to fasten and lock the body of the membrane to the wall.



- Use Membrane Cap Molding for angles and sloping edges.

When installing SUPERSEAL Dimpled Membrane on an ICF foundation, always use DimpleGrip Molding for the top and side edges and Super Plugs to fasten the body of the membrane to the wall.

Use 1.5" - 2" galvanized or plated screws and ensure you always fasten to the ICF web connectors.