


Installing **SUPERSEAL** Dimpled Membrane on an poured concrete wall

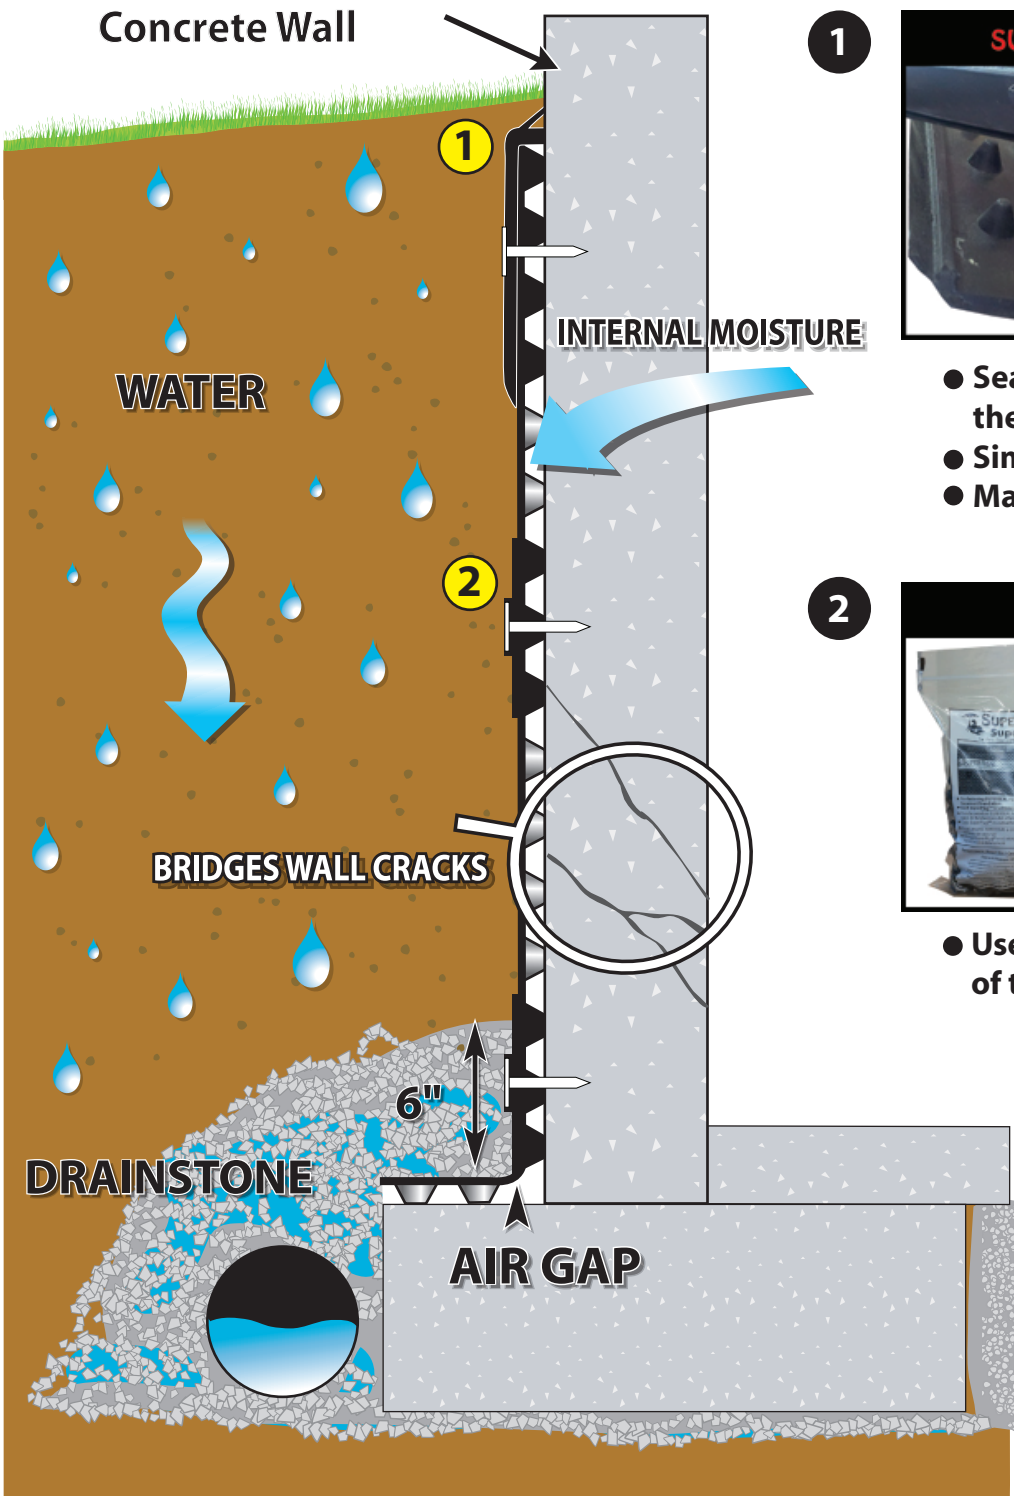

1



- Seals and locks the membrane to the wall in one step.
- Simple and easy to install.
- Made of tough, long-lasting HDPE

2



- Used to fasten and lock the body of the membrane to the wall.



- Use Membrane Cap Molding for angles and sloping edges.

When installing on a poured concrete foundation, use DimpleGrip Molding for the top and side edges and Super Plugs to fasten the body of the membrane to the wall. Use Membrane cap molding for angles or sloping areas. Fasten with 1 ¼" or 1½" concrete nails. Use standard tar based caulking for seams or overlaps.

Suggested nail guns are Hilti GX 120, Trakfast 1200 or powder shot nail guns with lowest charge.